


Overview of basic DHW installation*

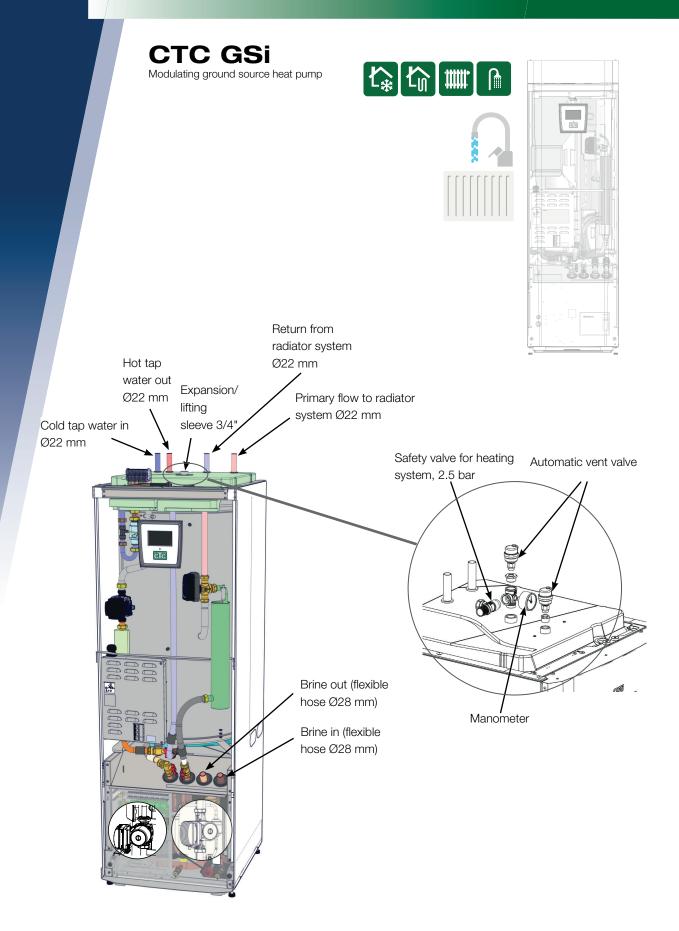

^{*}This overview is only intended as an aid to installation; all safety and installation instructions in the Installation and Maintenance Manual for the product must be followed.



Overview of basic electrical installation*

CTC GSi

Modulating ground source heat pump














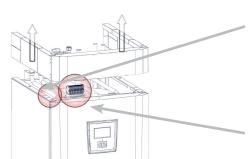

Feed cabling

The electrical connection must be preceded by an omnipolar switch and a residual current device in the central unit. The system must be designed so that all necessary rules and requirements are fulfilled (read the Installation and Maintenance Manual).

Terminal block X2

L1 - Externt 230 V, Option L1 - M40 - Fläkt, Option Y2 - Shunt 2, Option G2 - Rad.pump 2, Option Y2-Option M40 - Option M40 - Option	Kommunikation, extern	B15 - Utegivare	B2 - Framledningsgivare 2 Option	B11 - Rumsgivare 1 Option	B12 - Rumsgivare 2 -Option	COMMON *B103- Strömkännare - Option	M40 - Fläkt PWM- styrning, Option
LILI SI SI N N PER	B A G sc	0.00	G15 G16 G16	G G G G G G G G G G G G G G G G G G G	G G G G G G G G G G G G G G G G G G G		

Terminal block X2

^{*}This overview is only intended as an aid to installation; all safety and installation instructions in the Installation and Maintenance Manual for the product must be followed.